



Lightweight Swivel Bipod

- Adjusts 9" to 13" in height
- Swivel head for sighting adjustments
- Quick attach/detach
- Allows secure use of sling
- Fits most bolt action rifles

Instructions for use:

1. In folded-up position, legs point in the direction of the muzzle, padded cradle facing up.
2. Remove front sling connector to expose sling swivel stud.
3. Turn adjustment wheel on the underside counterclockwise to elevate the attachment pins protected by the green plastic sleeve.
4. Remove the green sleeve and position both pins in the sling swivel stud, turn adjustment wheel clockwise until the bipod is snug and secure.
5. Adjustment wheel on the rear of the bipod adjusts tension of the swivel mechanism, reattach sling connector to slots to the rear of the adjustment wheel.
6. Latch just above foot is used to extend or retract the legs.